



CREATING NEW
EXPERIENCES

User Manual

Dear Customer, thank you for choosing Nillkin products! To help you better understand this product, please read this manual carefully before use. We wish you a pleasant experience!

Change language

Mac / iOS : Control + Spacebar

Windows : Alt + Shift

Android : Control + Spacebar / Shift +
Spacebar

Compatible system

Win / iOS / Android / Mac


Switching input methods

Mac / iOS : Control + Spacebar

Windows : Shift

Android : Shift


Product function

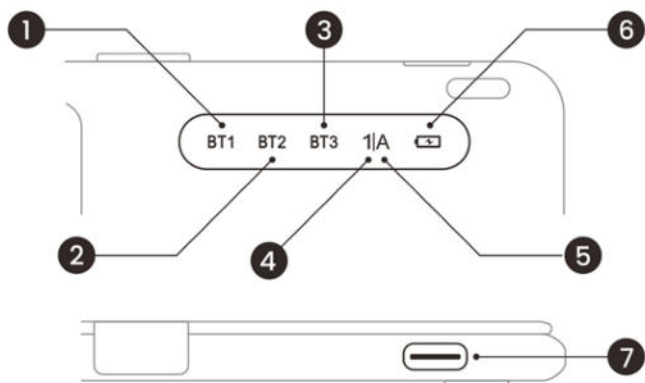

EN

Bluetooth 1 indicator	1
Bluetooth 2 indicator	2
Bluetooth 3 indicator	3
Digital indicator light	4
Case light	5
Battery/Charging Indicator Light	6
Charging interface	7

Bluetooth mode connection instructions

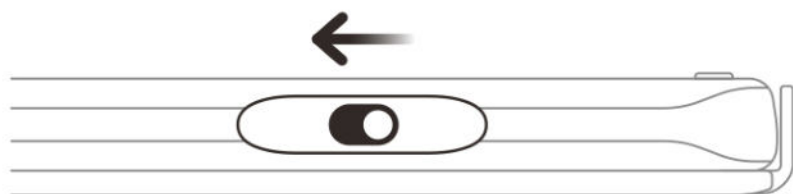

1



2



3



4

Please turn on the keyboard power switch, press Fn + BT1/BT2/BT3 to select the Bluetooth channel, then press Fn + C to enter pairing mode (the blue light will flash).

1

Turn on "Bluetooth" on your device and enter search mode.

2


Once "Cube Pocket Keyboard" is detected, click on the device name to connect.







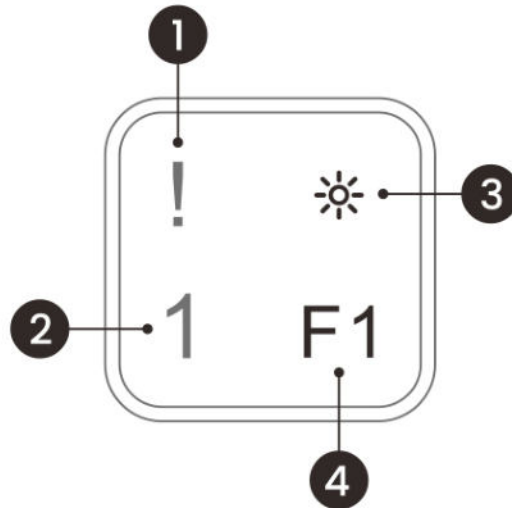

3


When the connection is successfully paired, you can comfortably use your keyboard.

4

Keyboard shortcut function key description



 + 	Shift + Key: Punctuation marks	1
	Direct press: Arabic numerals (0-9)	2
 + 	Fn + Key: Multimedia functions	3
 +  + 	Fn + Shift + Key: F1-F12	4

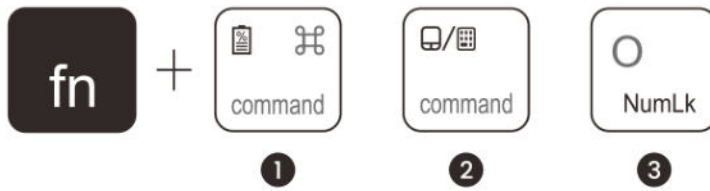


Red light flashes 3 times: Battery level 0–30%, Blue light flashes 3 times: Battery level 30–70%, Green light flashes 3 times: Battery level 70–100%, Charging: Red indicator light stays on. Fully charged: Light turns off. 1

Switch from touchpad mode to numpad mode 2

In numpad mode, keyboard output is locked (no number input) 3

Lock operation

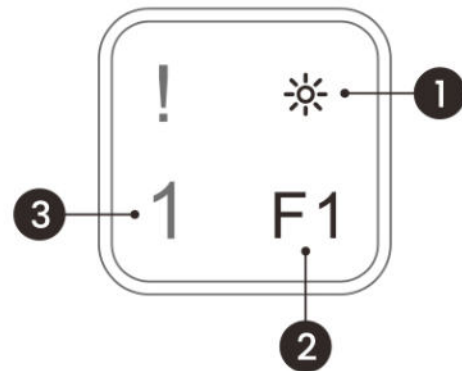

FN+Tab is the FN Lock function

1st press : Direct key presses will output multimedia controls. 1


2nd press : Direct key presses will output Esc/F1-F12. 2

3rd press : Returns to the default state. 3

Caps Lock & Numeric Key Indicators

Device	Numeric Key (1)	Caps Lock (A)	Num Lock	Remarks
Windows	Blue LED	Green LED	No LED	When NumLock is ON, the numeric keypad only outputs: = / * - + ↑ ↓ ← → Delete Enter
Android Tablet	Blue LED	Green LED	No LED	When NumLock is ON, the numeric keypad only outputs: = / * - + ↑ ↓ ← → Delete Enter
ios/Mac os	Blue LED	Green LED	Blue LED	Fn + NumLock is invalid (retains numeric keypad function).

Touchpad Function Guide (Windows) - Windows System

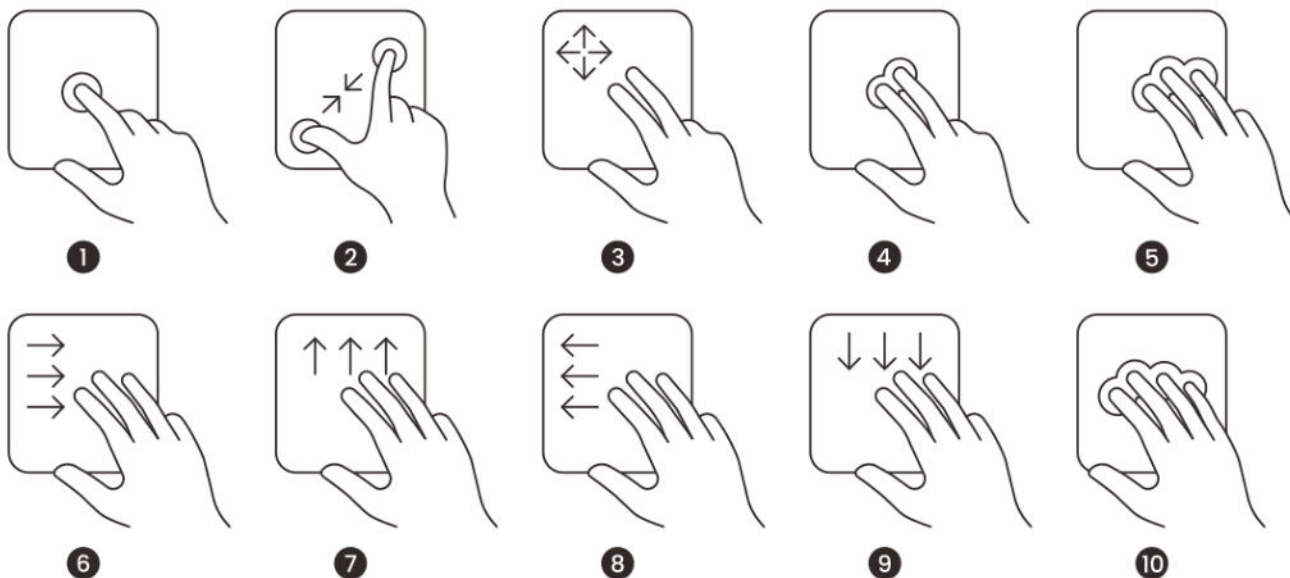

Single-tap - Left mouse click

Two-finger spread/pinch - Zoom in/out


Two-finger swipe up/down or left/right - Mouse scroll wheel function

Two-finger tap - Right mouse click


Three-finger tap - Search function

- | | | |
|---|---|----|
| 1 | Three-finger continuous swipe right - Switch active windows | 6 |
| 2 | Three-finger swipe up - Open task view window | 7 |
| 3 | Three-finger continuous swipe left - Switch active windows | 8 |
| 4 | Three-finger swipe down - Show desktop | 9 |
| 5 | Four-finger tap - Win+A shortcut (Open Action Center) | 10 |


Touchpad Function Guide (Android System)

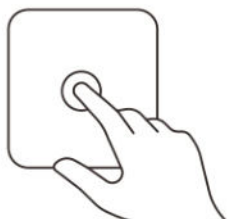


1

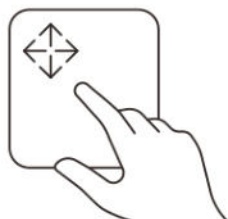


2

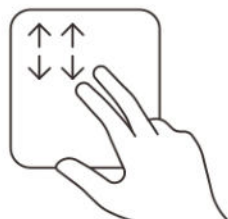


3

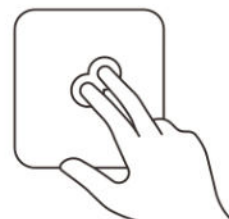


4

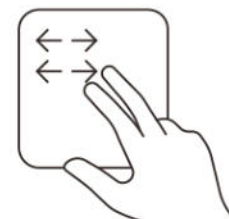


5

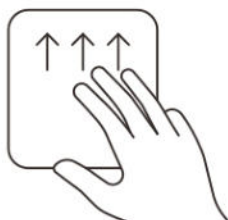

6

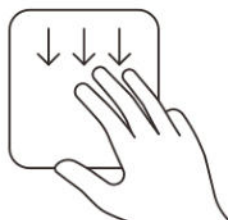

7

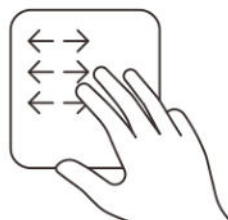

8

Single-tap – Left mouse click

Single-finger move – Cursor movement

Two-finger swipe up/down – Mouse scroll wheel

Two-finger tap – Right mouse click


1 Two-finger swipe left/right – Horizontal scrolling 5

2 Three-finger swipe up – Open multitasking view 6


3 Three-finger swipe down – Return to home screen 7

4 Three-finger swipe left/right – Switch between recent apps 8


Trackpad Function Guide iOS System

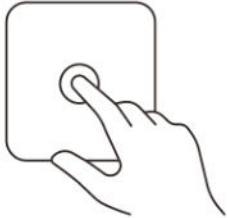


1

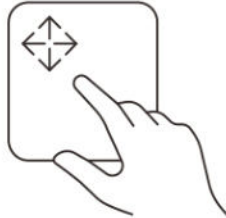


2

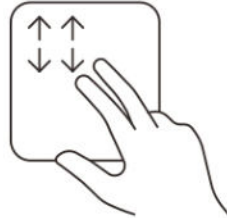


3

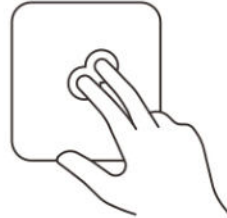


4

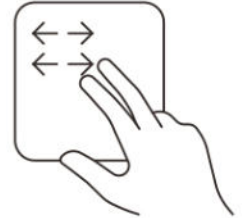


5

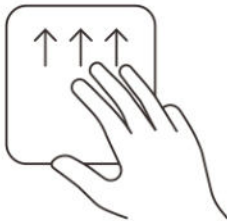

6

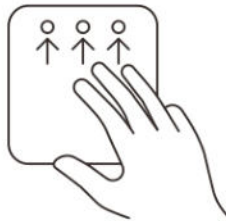

7

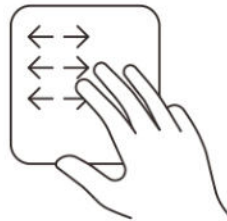

8

Single-finger tap: Left mouse click

Single-finger move: Cursor movement

Two-finger vertical scroll: Scroll up/down

Two-finger tap: Right mouse click

1

2

3

4

Two-finger horizontal scroll: Scroll left/right

Three-finger swipe up: Return to home screen

Three-finger swipe up & hold: Open multitasking view

Three-finger swipe left/right: Switch between active windows


5

6


7

8

Trackpad Function Guide (macOS)

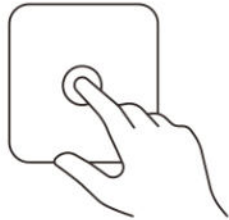


1

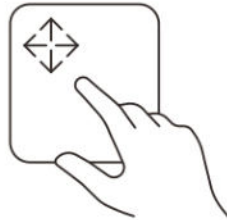


2




3

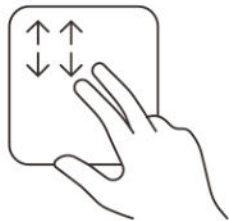

4

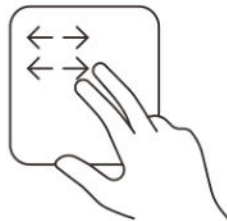

5

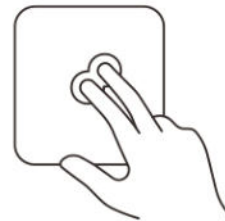

6

Single-tap – Left mouse click

1

Single-finger move – Cursor movement

2

Double-tap and hold to drag – Drag and drop

3

Two-finger swipe up/down – Vertical scroll

4

Two-finger swipe left/right – Horizontal scroll

5

Two-finger tap – Right mouse click

6

Attention: Touch gestures may change due to system upgrades and other factors

Troubleshooting

Please contact after-sales service personnel.

Intellectual Property Information

Unauthorized reproduction of this user manual's content is strictly prohibited without the company's permission.

Safety Reminder

Do not open or repair the device. Do not use the device in damp environments. Clean the device with a dry cloth.

Warranty Terms

This device comes with a 1-year warranty service starting from the date of purchase.

Keyboard Maintenance

1. Do not expose the device to liquids or humid conditions, or let it get wet in the rain. Avoid using the device near bathtubs, sinks, saunas, swimming pools, or steam rooms.
2. Temperature control – Do not expose the device to extremely high or low temperatures.
3. Avoid direct sunlight – Do not leave the device under prolonged direct sunlight.
4. Keep away from open flames – Do not place the device near stoves, candles, fireplaces, or other sources of fire.
5. Handle with care – Avoid scratching the product with sharp objects. Regularly charge the device to ensure proper functionality.

FAQ

1. Tablet cannot connect to the Bluetooth keyboard?

- ① First, check whether the Bluetooth keyboard is in pairing mode. Then, turn on the tablet's Bluetooth and search for devices to connect.
- ② Ensure the Bluetooth keyboard has sufficient battery. Low battery may cause connection issues—please recharge the keyboard before use.

2. The keyboard's battery indicator keeps flashing during use?

If the keyboard's battery indicator flashes during use, it means the battery is running low. Please recharge the keyboard as soon as possible.

3. The device shows the Bluetooth keyboard is disconnected?

If the Bluetooth keyboard is inactive for a period, the device will automatically turn off Bluetooth to save power. Press any key on the keyboard to wake it, and the Bluetooth connection will resume automatically.